


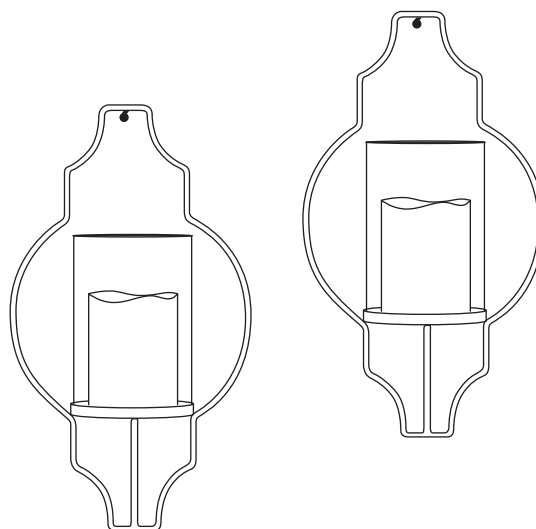

## IMPORTANT

Before operating your LampLust Hurricane Glass Flameless Candle Wall Sconces, please make sure that you carefully read through these instruction sheets.

**NOTE:** The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the candles.



## GENERAL INFORMATION

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use.

DO NOT DISPOSE OF IN FIRE. Please dispose at your local recycling facility.


## WHAT WE PROVIDE

- Two Hurricane Glass Flameless Candle Wall Sconces
- 4 AA Batteries (2 Per Candle)
- 8 Button Remote Control

## STEP BY STEP INSTRUCTIONS


Before turning on your candles, **locate the batteries inside the small white box.**

Then remove the plastic from around the batteries and insert them into the the battery compartment.

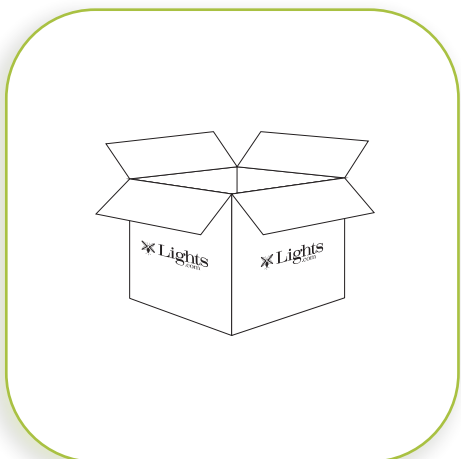

# 1


## UNPACK YOUR CANDLE WALL SCONCES

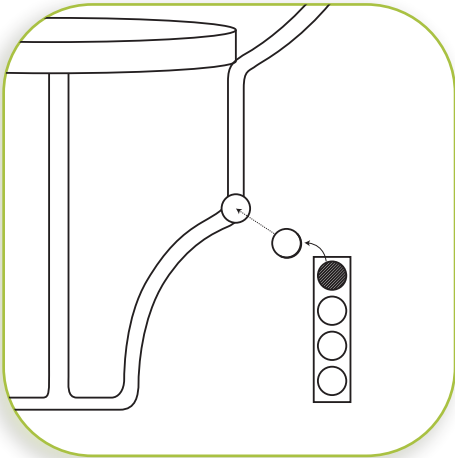

2

**INSTALL ADHESIVE PADS**


Attach the adhesive pads onto the lower part of the back of the frame to protect the wall.

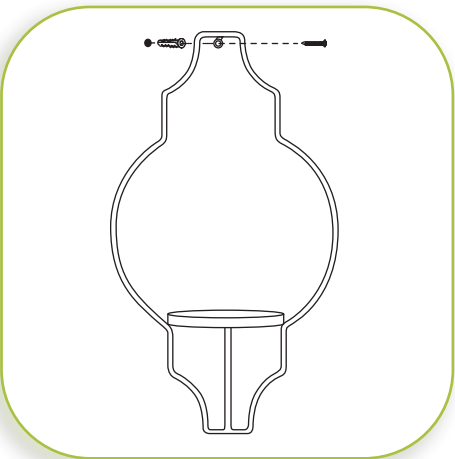

3

**MOUNTING WALL SCONCE**


Mark a point in the wall where the anchor is to be mounted using the hole from the top of the wall sconce as a guide. DO NOT make the hole wider than the anchor. You may also use a drill with a drill bit smaller than the anchor. Place the anchor over the hole and firmly tap it in until the anchor is flush with the wall. Align the hole on top of the wall sconce to the anchor and secure the sconce flush against the wall using the screw. Tighten to secure.

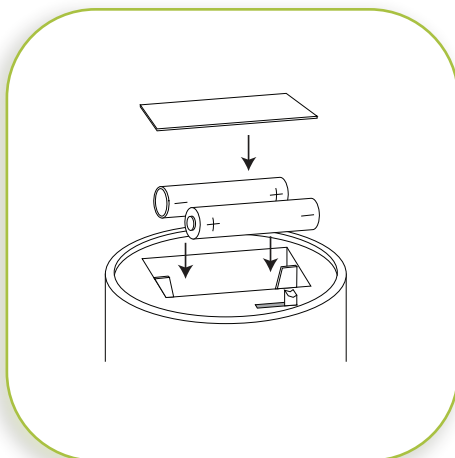

4

**BATTERY INSTALLATION**


The candles work with 2 x AA batteries (included). The battery compartment is located on the bottom of the candles. Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartments secured.

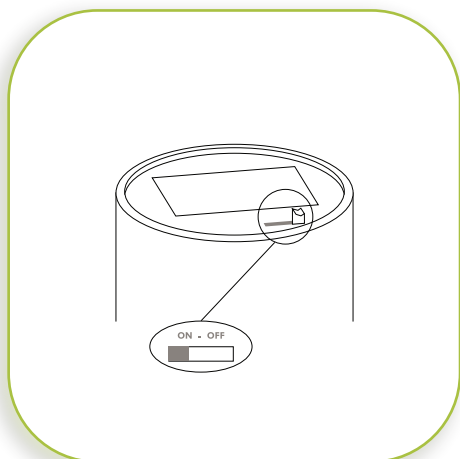

5

**ON/OFF**


The ON/OFF switch is located on the bottom of the candle, below the battery compartment. Once the switch is turned to the "ON" position, the candle can be controlled using the remote, until it is manually turned off. Turn candles off at the switch during long periods of non-use in order to preserve battery life.

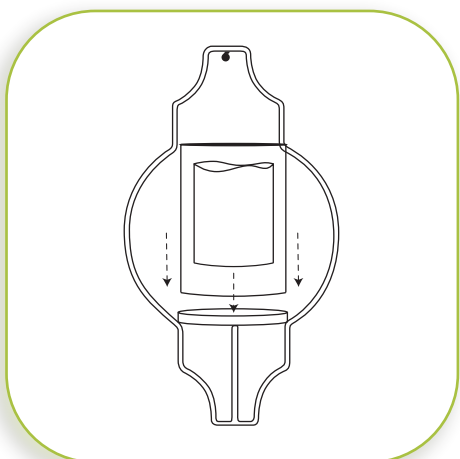

6

**INSTALL CANDLE AND GLASS**

Place the candle onto the candle plate on the wall sconce followed by the glass.

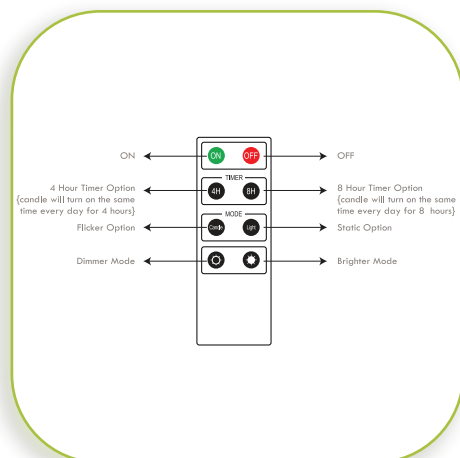

7

**REMOTE FUNCTIONS**

The candle switch must be turned to "ON" in order for the remote control to function. In order to set the timer, turn the candle off using the remote control and then press the desired timer button to set. The candle will turn on and off at the same time each day once set.