

IMPORTANT

Before using your Remote Control for Infinity Wick and Ivy Candles please make sure that you carefully read through these instruction sheets.

NOTE: Your candles or lantern containing an Infinity Wick candle **must be powered on** in order for the remote to function. Please also note, this remote
control is ONLY compatible with Ivy Flameless Candles, or Infinity Wick Candles
unless otherwise stated.



GENERAL INFORMATION

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use.

DO NOT DISPOSE OF IN FIRE. Please dispose at your local recycling facility.


NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the candles.

WHAT WE PROVIDE

6-Button Remote Control


STEP BY STEP INSTRUCTIONS

Before using your remote, remove the clear pull-tab from the battery compartment, located at the bottom of the remote.

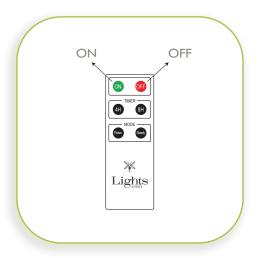

ON/OFF FUNCTION


The on and off buttons are located on the top of the remote.

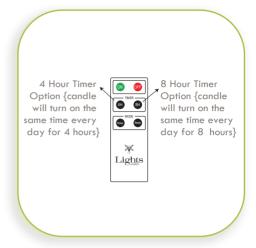

2

TIMER FUNCTION

The remote allows you to set an optional 4-hour or 8-hour timer. Once you have pressed the preferred timer button, your candles will turn on at the same time every day for the specified amount of time.

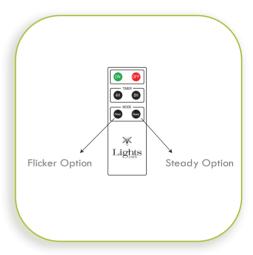


3

LIGHT SETTING

The remote allows you to choose between a steady light setting or a more realistic flickering light setting.

NOTE: If using the remote with an Infinity Wick Candle Lantern, the candle might not have this function, therefor the flicker setting may not work.

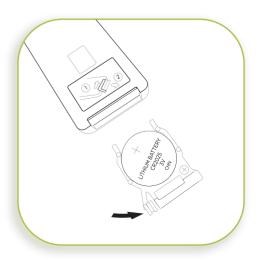

4

CHANGING THE BATTERY

This remote works with a CR2025 battery. To change the battery squeeze in the tab at the bottom of the remote, and pull out the battery slot completely. Battery should be inserted with the correct polarity as indicated (+/-) and battery compartment secured before use.