 


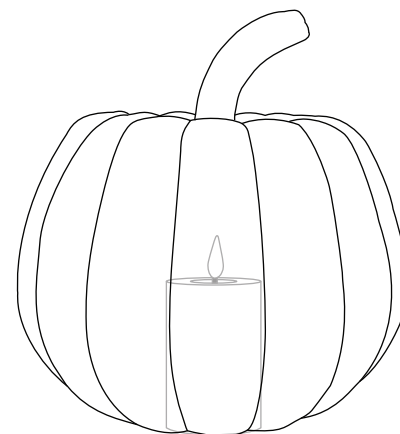

IMPORTANT

Before using your Blair Ombre Glass Pumpkin with Candle, please make sure that you carefully read through these instruction sheets.

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the lantern.



 
GENERAL INFORMATION

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use.

DO NOT DISPOSE OF IN FIRE. Please dispose at your local recycling facility.

WHAT WE PROVIDE


- 1 x Glass Pumpkin Cloche
- 1 x 3" Tall Infinity Wick Votive Candle
- 2 x CR2450 Batteries (1 Extra)

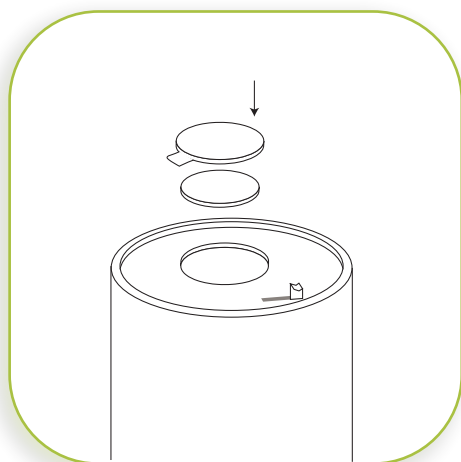

1

BATTERY INSTALLATION

 
The votive candle works with 1 x CR2450 battery (included). The battery compartment is located on the bottom of the votive. Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartment should be secured before use.

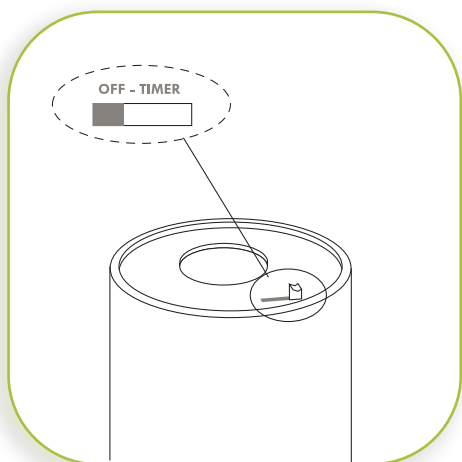

2

OFF/TIMER SWITCH

 The OFF/TIMER switch is located on the bottom of the candle next to the battery compartment. Utilize this switch to set the 6 hour timer. The candle will turn on at the same time every night for 6 hours until the candle is manually turned off, or until the battery needs replacing.

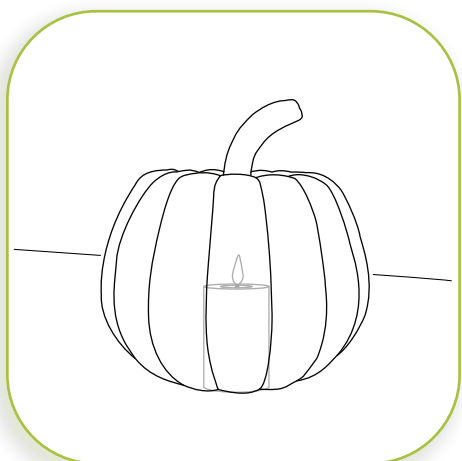

3

PUMPKIN PLACEMENT

Find a sturdy flat surface with enough space for your Blair Pumpkin. Make sure the candle is turned on. Center your candle and then cover with the pumpkin cloche.