



**IMPORTANT**

Before using your Infinity Wick Votive Candles, please make sure that you carefully read through these instruction sheets.

**NOTE:** The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the candles.



**GENERAL INFORMATION**

Battery installation should only be performed by an adult. Keep all batteries away from children. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use. DO NOT DISPOSE OF IN FIRE. Please dispose at your local recycling facility.

**MODEL NO.**


LC005351

**WHAT WE PROVIDE**

- 4 x Infinity Wick Ivory Votive Candles
- 1 x CR2450 3V Battery per candle
- 6-Button Remote Control (1 x CR2025 3V Battery Inside)

**STEP BY STEP INSTRUCTIONS**


Before turning on your votives, remove the battery tab from the battery compartment, (located on the bottom of the votive) thereby activating the battery.

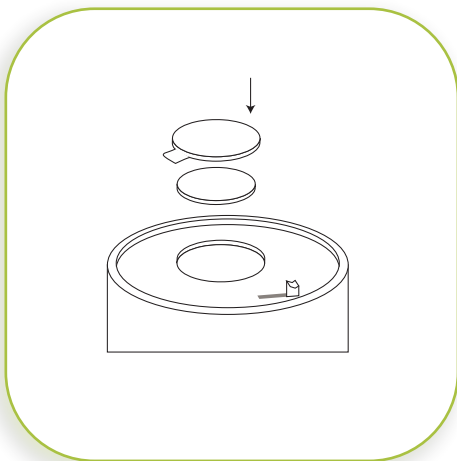

1

**BATTERY INSTALLATION**


Each votive works with 1 x CR2450 3V battery (included). The battery compartment is located on the bottom of the votive. Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartments secured before use.

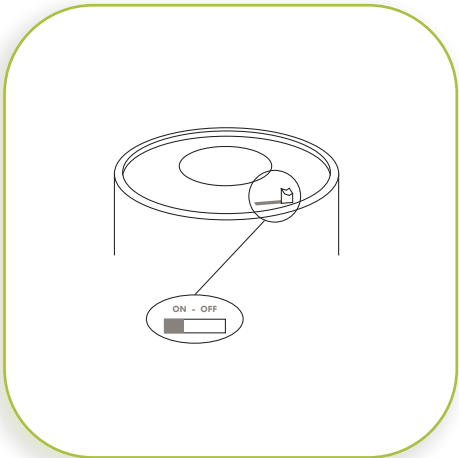

# 2

## ON/OFF SWITCH

The ON/OFF switch is located on the bottom of the votive, below the battery compartment. To turn the votive ON/OFF use the switch located on the bottom. Once the switch is moved to the "ON" position it can be controlled using the remote, until it is manually turned to "OFF".

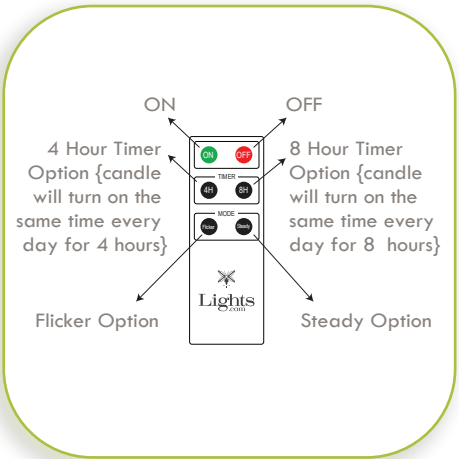

# 3

## REMOTE FUNCTIONS



The candle must be manually turned on in order for the remote control to function. Pull out the clear tab at the base of the remote control to activate the cell battery inside.



# 4

## CHANGING THE REMOTE BATTERY

This remote works with a CR2025 3V battery. To change the battery squeeze in the tab at the bottom of the remote, and pull out the battery slot completely. Battery should be inserted with the correct polarity as indicated (+/-) and battery compartment secured before use.

 <b>WARNING</b>	
<ul style="list-style-type: none"><li>• <b>INGESTION HAZARD:</b> This product contains a CR2025, 3 Volt Cell Battery and a CR2450, 3 Volt Cell Battery.</li><li>• <b>DEATH</b> or serious injury can occur if ingested.</li><li>• A swallowed button cell or coin battery can cause <b>Internal Chemical Burns</b> in as little as <b>2 Hours</b>.</li><li>• Keep new and used batteries <b>OUT OF REACH OF CHILDREN</b>.</li><li>• <b>Seek immediate medical attention</b> if a battery is suspected to be swallowed or inserted inside any part of the body.</li></ul>	

### IMPORTANT BATTERY SAFETY INFORMATION

Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Even used batteries may cause severe injury or death. Do NOT dispose of batteries in the household trash or incinerate. Call a local poison control center for treatment information. This product is compatible with a CR2025 battery type with a nominal battery voltage of 3 and a CR2450 battery type with a nominal battery voltage of 3.

Non-rechargeable batteries are not to be recharged. Do not force discharge, recharge, disassemble, heat above 60 C/140 F, or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns. Ensure the batteries are installed correctly according to polarity (+ and -). Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.