



IMPORTANT

Before using your wreath, make sure that you carefully read through these instruction sheets.

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors that cannot be built into any product. This approach must be used by the person(s) caring for and operating the wreath.

GENERAL INFORMATION

The wreath is suited for indoor use only. DO NOT attempt to replace or repair any damaged cable parts. After use, ensure the wreath is clean and dry before storage.

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use.

DO NOT DISPOSE IN FIRE. Please dispose at your local recycling facility.

STEP BY STEP INSTRUCTIONS

Before using your wreath remove all packaging. When setting up your wreath, carefully position cables to avoid a tripping hazard.



1



WHAT WE PROVIDE


- Winterberry and Greenery Wreath with 100 LEDs
- 4 x AA Battery Box
- Decorative Fabric Bag to Conceal Battery Box

WHAT YOU NEED

- 4 x AA Batteries
- Optional Hook for Hanging

STYLE AND HANG YOUR WREATH


The branches on the wreath come tightly packed for shipping. Separate and style the branches for your desired look. Be sure that the wreath is hung on a nail, screw, or hook that is strong enough to support the weight of the wreath and battery box.

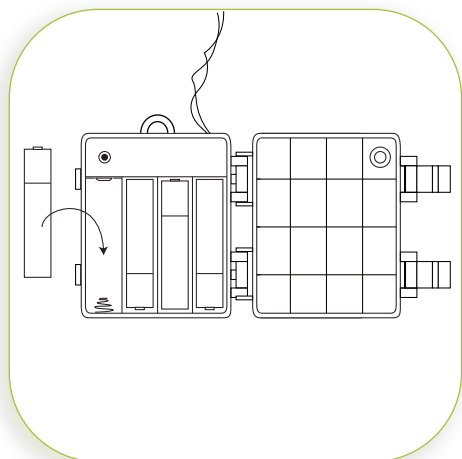

2

BATTERY INSTALLATION

The wreath works with 4 x AA batteries. Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartment secured before use.

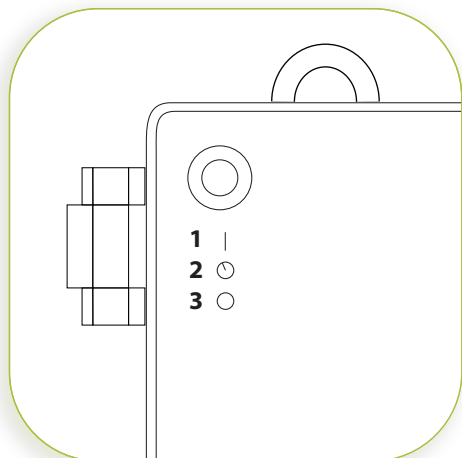

3

BUTTON OPTIONS

Press the button once to turn on the wreath with no timer.
Press the button again to activate the 6-hour timer.
Once the timer is set, the garland will turn on and off at the same time each day.
Press the button a third time to turn off the wreath.



4

CONCEALING THE BATTERY BOX

Place the battery box inside the included decorative fabric bag and tie the drawstring. Hook the battery box onto the hook at the back of the wreath and arrange branches to conceal.