

INSTRUCTIONS



IMPORTANT

Before using your Lamplust Garland, make sure that you carefully read through these instruction sheets.

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors that cannot be built into any product. This approach must be used by the person(s) caring for and operating the garland.

GENERAL INFORMATION

 
The garland is suited for indoor use only. DO NOT attempt to replace or repair any damaged cable parts. After use, ensure the wreath is clean and dry before storage.

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use.

DO NOT DISPOSE IN FIRE. Please dispose at your local recycling facility.

STEP BY STEP INSTRUCTIONS


Remove all packaging. When setting up your garland, carefully position cables to avoid a tripping hazard.

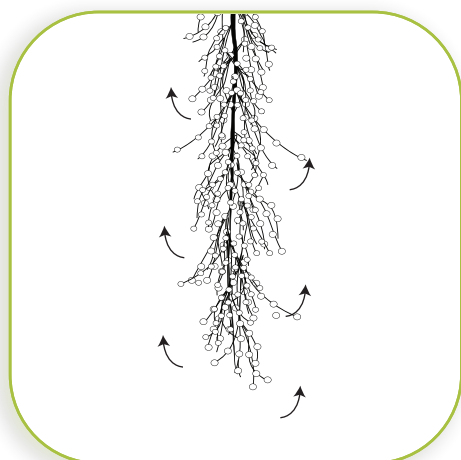

1

STYLE YOUR GARLAND

 The branches on the garland come tightly packed for shipping. Separate and style the branches for your desired look.

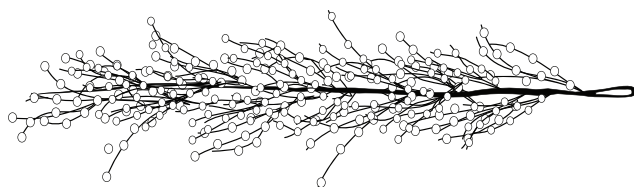

ITEM NO.

- LC005399

 
WHAT WE PROVIDE

- Royale Red Berry Garland with 100 LEDs
- 4 x AA Battery Box
- Decorative Fabric Bag to Conceal Battery Box

WHAT YOU NEED

- 4 x AA Batteries
- Optional Hook(s) for Hanging


INSTRUCTIONS

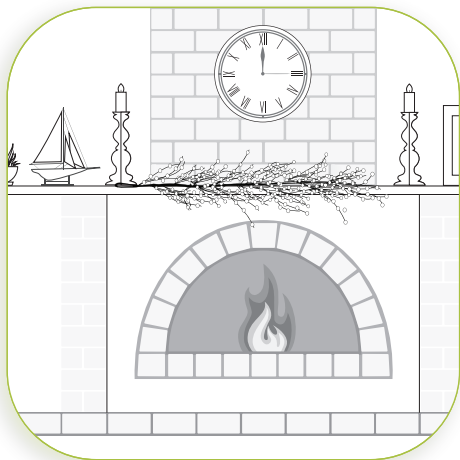

2

SELECT A LOCATION FOR YOUR GARLAND

 
Be sure that the garland is hung or placed securely to support the weight of the garland and the battery box.

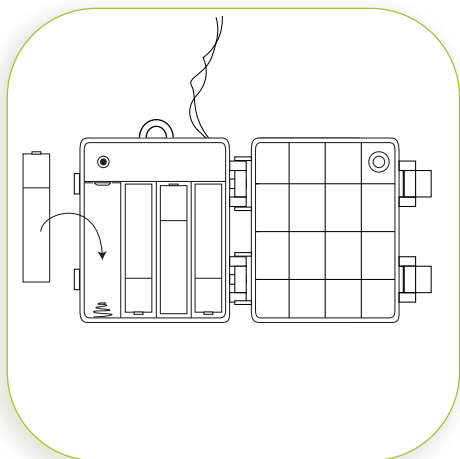

3

BATTERY INSTALLATION

 The garland works with 4 x AA batteries. Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartment secured before use.

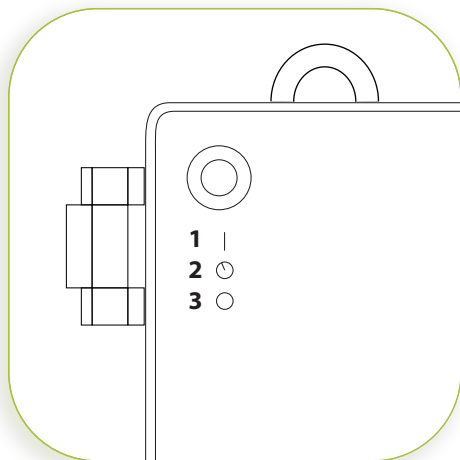

4

BUTTON OPTIONS

Press the button once to turn on the garland with no timer.

Press the button again to activate the 6-hour timer.

Once the timer is set, the garland will turn on and off at the same time each day.

Press the button a third time to turn off the garland.



5

CONCEALING THE BATTERY BOX

Place the battery box inside the included decorative fabric bag and tie the drawstring. If hanging your garland, hang the battery box as well to support its weight.