


ASSEMBLY INSTRUCTION EMMETT OUTDOOR POST LIGHT MODEL NO. LC005680

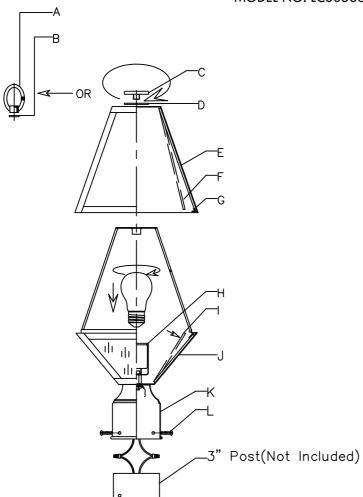

PART NUMBER

- A. (1)-Loop
- B. (1)-Rubber Washer; Ø16mm
- C. (1)-Decorative Nut
- D. (2)-Rubber Washer Ø40mm;
- E. (1)-Top Cage
- F. (4)-Glass 1; (2.75" + 7.5") X 7"
- G. (12)-Clip
- H. (1)-Socket
- I. (4)-Glass 2; (2.1" + 7") X 4"
- J. (1)-Bottom Cage
- K. (1)-Fitter
- L. (3)-Screws

WARNING: This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.





You will need 1-Medium Base Bulb 40 Watts Recommended 100 Watts Max. USE LED BULBS FOR EXTENDED USE

HOW TO INSTALL

- To install glass panels, separate the Bottom Cage and the Top Cage, by removing the Decorative Nut and rubber washer.
- Bend glass Clip and slide Glass #1 into the Top Cage and Glass #2 into the Bottom Cage.
- 3. Bend glass Clip to secure Glass #1 and Glass #2.
- 4. Install the bulb (not included) to the socket.
- Connect the Bottom Cage and the Top Cage,
 by screwing in Decorative Nut to secure cage.
- The fitter can now be mounted to the post by screws
- 7. To replace the top finial, screw off the decorative nut, take down rubber washer. Bring the loop and rubber washer (11), and the loop onto the top fixture.

Replacement Glass Installation:

 Follow instructions #1 through #3 above to install new glass. Complete by connecting the Bottom Cage and the Top Cage by screwing in Decorative Nut to secure cage.

Bulb Replacement:

- Separate the Bottom Cage and the Top Cage, by removing Decorative Nut.
- 2. Install the bulb into the socket
- Complete by connecting the Bottom Cage and the Top Cage by screwing in Decorative Nut to secure cage.