


ASSEMBLY INSTRUCTION ELLINGTON OUTDOOR MEDIUM WALL LIGHT 19" MODEL NO. LC005684

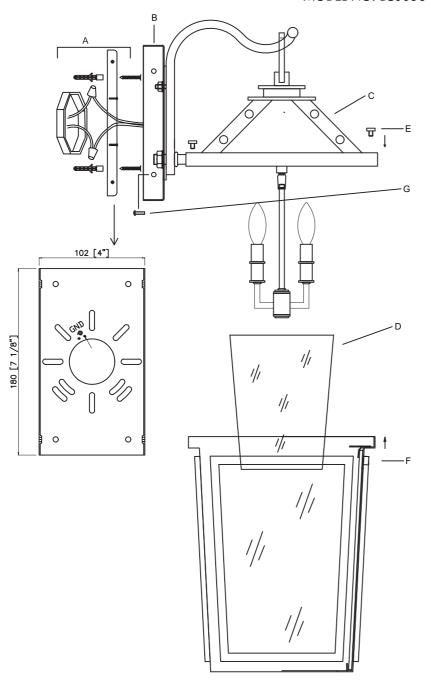

PART NUMBER

- A. (1)-Mounting Hardware
- B. (1)-Back Plate
- C. (1)-Top cover
- D. (4)-Glass Panels W7.75"*H11.75"
- E. (4)-Screws
- F. (1)-Bottom cage
- G. (4)-Machine Screws



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.





You will need 3-Candelabra Base Bulb 40 Watts Recommended 60 Watts Max. USE LED BULBS FOR EXTENDED USE This fixture is Wet Rated

HOW TO INSTALL

- Remove the top cover by loosening the cap nuts and install the bulb into the socket.
- Place the mounting plate over the outlet box and mark 4 points on the wall surface at the center of the 4 holes on the mounting plate.
- 3. Drill 4 holes at the marked points and insert the wall anchors.
- Attach the mounting plate over the outlet box using two outlet box screws. Insert the anchor screws into the wall anchors to tighten it.
- Insert the glass into the bottom cage and secure with the clip.
- Place the top over onto the bottom cage and secure with the cap nuts.
- Place the back plate over the mounting plate and secure with the screws.

How to change the bulb:

- Remove the top cover by loosening the cap nuts.
- 2. After changing the bulbs, place the top cover back and secure with the cap nuts.

WARNING: This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov