


ASSEMBLY INSTRUCTION
TOBIN OUTDOOR
MEDIUM WALL LIGHT 19"
MODEL NO. LC005692



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 1-Medium Base Bulb
40 Watts Recommended 60 Watts Max.
USE LED BULBS FOR EXTENDED USE
This fixture is Wet Rated

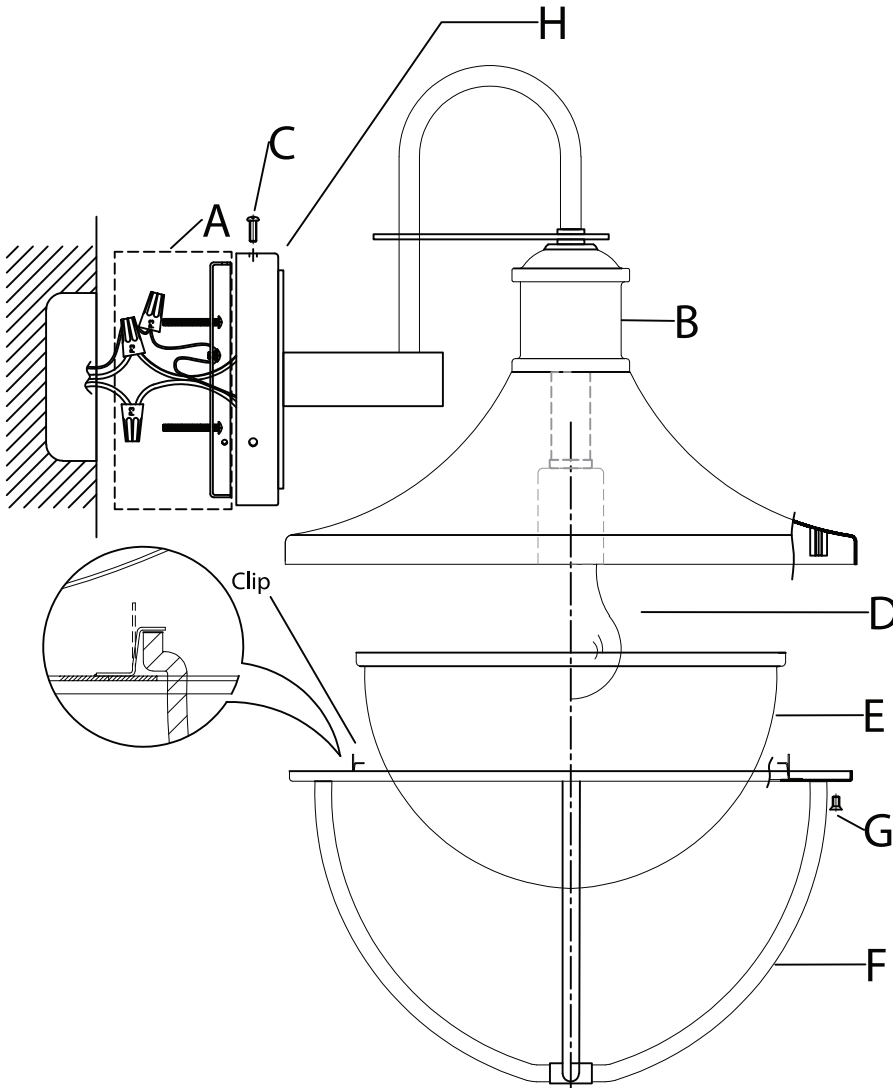

HOW TO INSTALL

1. Remove the bottom frame from the top frame by loosening the 4 flat head screws.
2. Install the mounting plate onto the outlet box using the two outlet box screws.
3. Place the top frame over the mounting plate and secure with the screws.
4. Place the glass shade inside the bottom frame and secure with the clips.
5. Install the bulb onto the socket. Raise the bottom frame up to the top frame and align the holes on them. While one person hold the frame, the other person tightens the screws using a screwdriver (not provided)

PART NUMBER

- A. (1)-Mounting hardware
- B. (1)-Top Frame
- C. (3)-Screws
- D. (1)-Light cluster
- E. (1)-White glass shade Ø10"×H5.5"
- F. (1)-Bottom frame
- G. (4)-Flat head screws
- H. (1)-Backplate Ø6"×1"

WARNING: This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov