


ASSEMBLY INSTRUCTION
TOBIN OUTDOOR
PENDANT LIGHT 16"
MODEL NO. LC005694

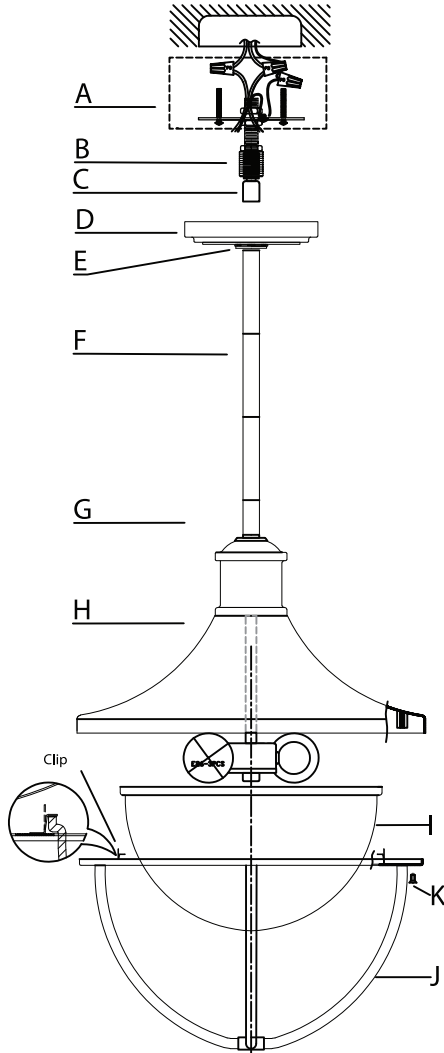

PART NUMBER

- A. (1)-Mounting hardware
- B. (1)-Screw collar loop
- C. (1)-Swivel
- D. (1)-Canopy Ø5"*0.75"
- E. (1)-Collar loop ring
- F. (3)-Hang rod Ø0.75"*12"
- G. (1)-Hang rod Ø0.75"*6"
- H. (1)-Top frame
- I. (1)-White glass shade Ø13.25"*H7"
- J. (1)-Bottom frame
- K. (4)-Flat head screws



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 3-Medium Base Bulb
40 Watts Recommended 60 Watts Max.
USE LED BULBS FOR EXTENDED USE
This fixture is Wet Rated

HOW TO INSTALL

1. Remove the bottom frame from the top frame by loosening the 4 flat head screws.
2. Decide the preferred hanging height and choose the correct length of rods needed.
3. Pass the wires through the rods ,swivel, screw collar loop and canopy. Screw one end of rod assembly onto the top frame and the other end onto the swivel.
4. Raise the fixture up to the ceiling and install the mounting bar onto the outlet box. Do the wire connections and secure the canopy using the collar loop ring.
5. Place the glass shade inside the bottom frame and secure with the clips.
6. Install the bulb onto the socket. Raise the bottom frame up to the top frame and align the holes on them. While one person hold the frame, the other person tightens the screws using a screwdriver (not provided)

WARNING: This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov