


JULIET
TABLE LAMP
MODEL NO. LC006250

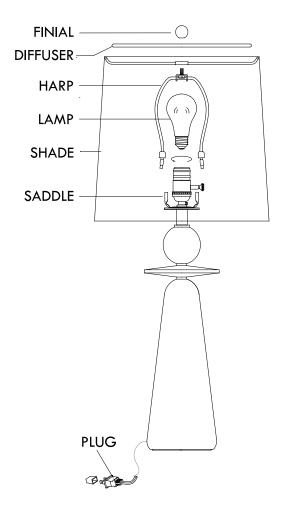

WARNING/CAUTION

- DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE. READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.
- TO AVOID THE RISK OF FIRE OR SHOCK, FIXTURE MUST BE INSTALLED IN COMPLIANCE WITH ALL APPLICABLE NATIONAL AND LOCAL ELECTRICAL/BUILDING CODES. THE INSTALLATION AND MAINTENANCE OF THIS UNIT SHOULD BE COMPLETED BY A LICENSED ELECTRICIAN OR CERTIFIED FACTORY TRAINED TECHNICIAN.
- CALIFORNIA PROP 65: THIS LIGHTING FIXTURE CONTAINS CHEMICALS KNOWN TO THE STATE OF CALIFORNIA TO
 CAUSE CANCER, BIRTH DEFECTS, AND/OR OTHER REPRODUCTIVE HARM. WASH HANDS AFTER USE.
- UNPACK FIXTURE, PARTS AND PARTS BAG(S) BEFORE DISCARDING THE CARTON. MAKE CERTAIN THAT ALL PARTS ARE
 FOUND. INSPECT THE FIXTURE PRIOR TO INSTALLATION FOR ANY DAMAGE. FIXTURE MAY NOT BE RETURNED ONCE IT
 HAS BEEN INSTALLED. SEE WARRANTY FOR EXCEPTIONS.
- PLEASE CLEAN WITH A SOFT, DRY CLOTH ONLY! DO NOT USE CLEANSERS.

FIXTURE INSTALLATION

IMPORTANT:

Always unplug the power before installing or replacing bulb and before cleaning or other maintenance.

- 1. Remove the table lamp and parts bag(s) from the carton. Before discarding the carton, double check packing to make certain that all parts are found.
- 2. Insert the harp onto the saddle.
- 3. Install the lamp. The fixture is rated for 75 watt type A lamp. DO NOT EXCEED RECOMMENDED WATTAGE!
- 4. Carefully remove protective cover on the shade. Place shade and diffuser on the harp, then secure with finial.
- 5. Plug cord into wall outlet. Turn the switch on socket.
- 6. Restore power to circuit at breaker or fuse box.