


ASSEMBLY INSTRUCTION  
HOYT VANITY WALL SCONCE  
MODEL NO. LC005646, LC005647,  
LC005648



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 1-Medium Base Bulb  
60 Watts Recommended 100 Watts Max.  
USE LED BULBS FOR EXTENDED USE  
This fixture is Damp Rated

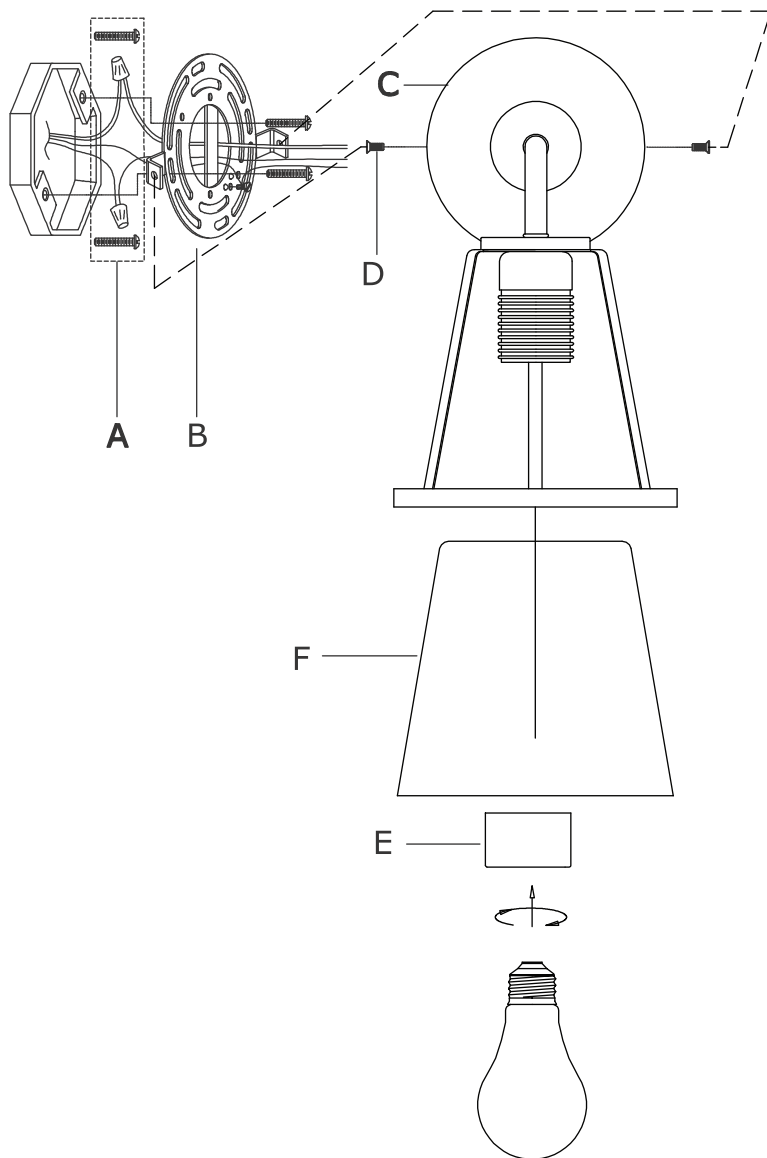

## HOW TO INSTALL

1. Install the mounting plate to the outlet box using two outlet box screws.
2. Install backplate onto the mounting plate, and secure with the screws.
3. Install the Glass shade onto the socket and secure with socket ring.
4. Install the bulb (not included) into the socket.

## PART NUMBER

- A. (1)-Mounting hardware
- B. (1)-Mounting plate
- C. (1)-Socket ring 2-1/4"
- D. (1)-Backplate W4-3/4"xH3/4"
- E. (2)-Screw
- F. (1)-Glass shade 6"