



ASSEMBLY INSTRUCTION LOGAN WALL SCONCE MODEL NO. LC005666

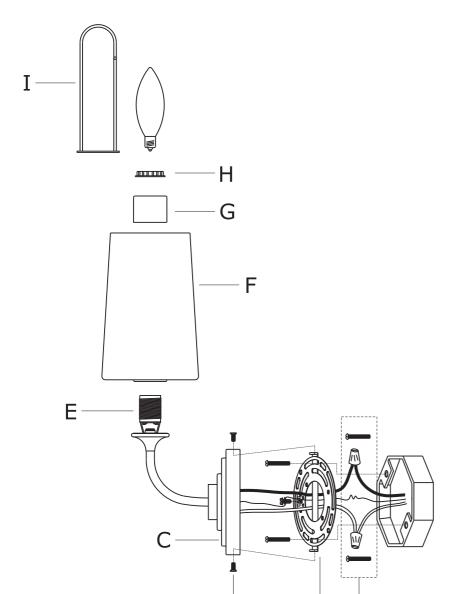



В

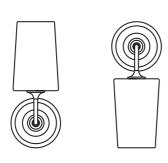

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.





You will need 1-Candelabra Base Bulb 40 Watts Recommended 60 Watts Max. USE LED BULBS FOR EXTENDED USE This fixture is Damp Rated

HOW TO INSTALL

- Install the mounting plate to the outlet box using two outlet box screws.
- Install backplate onto the mounting plate, and secure with the screws.
- Install the glass shade and spacer over the socket, then secure with the socket ring by wrench.
- 4. Install the bulb (not included) into the socket.

PART NUMBER

- A. (1)-Mounting hardware
- B. (1)-Mounting plate
- C. 1)-Socket
- D. (1)-Backplate W4-3/4"xH7/8"
- E. (2)-Screw
- F. (1)-Glass shade W4-3/8"xH6-5/8"
- G. (1)-Socket ring
- H. (1)-Spacer
- l. (1)-Wrench

WARNING: This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov