


ANITA
LIGHT CHANDELIER
MODEL NO. LC005924,
LC005925, LC005926,
LC005927, LC005928,
LC005929

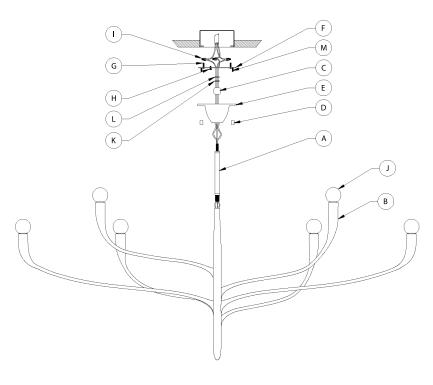

## WARNING/CAUTION

- DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE. READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.
- TO AVOID THE RISK OF FIRE OR SHOCK, FIXTURE MUST BE INSTALLED IN COMPLIANCE WITH ALL APPLICABLE NATIONAL
  AND LOCAL ELECTRICAL/BUILDING CODES. THE INSTALLATION AND MAINTENANCE OF THIS UNIT SHOULD BE
  COMPLETED BY A LICENSED ELECTRICIAN OR CERTIFIED FACTORY TRAINED TECHNICIAN.
- CALIFORNIA PROP 65: THIS LIGHTING FIXTURE CONTAINS CHEMICALS KNOWN TO THE STATE OF CALIFORNIA TO
  CAUSE CANCER, BIRTH DEFECTS, AND/OR OTHER REPRODUCTIVE HARM. WASH HANDS AFTER USE.
- UNPACK FIXTURE, PARTS AND PARTS BAG(S) BEFORE DISCARDING THE CARTON. MAKE CERTAIN THAT ALL PARTS ARE
  FOUND. INSPECT THE FIXTURE PRIOR TO INSTALLATION FOR ANY DAMAGE. FIXTURE MAY NOT BE RETURNED ONCE IT
  HAS BEEN INSTALLED. SEE WARRANTY FOR EXCEPTIONS.
- PLEASE CLEAN WITH A SOFT, DRY CLOTH ONLY! DO NOT USE CLEANSERS.

## **FIXTURE INSTALLATION**

- 1. Feed the wires through the STEM (A) twist tightly onto the FIXTURE ASSEMBLY (B). Keep adding additional stems until you desired hanging height is met.
- 2. Insert the CANOPY (E) on to the STEM (A) then insert the SWIVEL (C) onto the top of the STEM (A) and secure it with TOOTH WASHER (K) and HEX NUT (L).
- 3. Full the wire out from the junction box, and install the MOUNTING PLATE (F) onto the junction box using the MOUNTING SCREWS (G). Thread the STUDS (M) unto the MOUNTING PLATE (F), adjust its threads so that 3 16" of the thread extend beyond the CANOPY (E). This fixture is designed to be mounted on standard round or octagon junction box. The junction box must be securely mounted to the structure of the building.
- 4. Trim off the excess wire to minimum 6" beyond the STEM (A) and strip each wire 58".
- 5. Attach the Ground wire (Green) to the ground inside the outlet box (Generally green or bare copper wire) or the GROUND SCREW (H) on the MOUNTING PLATE (F). NEVER CONNECT GROUND WIRE TO "HOT" WIRE FAILURE TO FALLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!
- 6. Connect the white fixture leads to the neutral (Generally white) wire in the outlet box. Fasten the wire together with an approved fastener (WIRE NUT) (I). Starting 1" below the fastener, tightly wrap the connection with electrical tape so that the connection seals the end of the fastener. MAKE SURE THERE ARE NO EXPOSED WIRE OF STRANDS THAT COULD CAUSE A DANGEROUS SHORT CIRCUIT!
- 7. Connect the black fixture leads to the hot (Generally black) wire in the outlet box. Fasten the joined wires same as previous step. NEVER REVERSE HOT AND NEUTRAL WIRES. FAILURE TO FALLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!
- 8. Push the wires back into the junction box. Lift up the CANOPY (E) up to the ceiling, and secure it with the BARREL NUT (D).
- 9. Screw the BULB (J) up into the SOCKET of the FIXTURE ASSEMBLY (B). THIS FIXTURE IS RATED FOR 8 WATT LAMP.

  DO NOT EXCEED THE RECOMMENDED WATTAGE!
- 10. Restore power to the outlet at the breaker or fuse box.