


IMPORTANT

Before installing your Lights.com fixture, please make sure that you carefully read through these instruction sheets. Consider having your fixture installed by a qualified licensed electrician.

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care, are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the fixture.



COLLECTION

APPLICATION

MODEL NO.

Cyrus

Outdoor Hanging Light

LC005372

GENERAL INFORMATION

All electrical connections must be made in accordance with all ordinances, and Local and National Electrical Codes. These fixtures are intended for mounting to a standard 4" junction box. The box must be directly supported by the building structure and be ETL or U.L. Recognized.

STEP BY STEP INSTRUCTIONS


Before starting your installation, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. Just turning the light off at the light switch is not sufficient to prevent electrical shock.

WHAT WE PROVIDE

- Hanging Light
- Mounting & Wiring Hardware
- 1 Glass shade
- 6 Ft. Chain
- Canopy & Fixture Loop
 w/Collar Ring


WHAT YOU NEED

- Phillips head Screwdriver
- Wire Cutters
- Electrical Tape
- Chain Pliers
- 1 x 100W E26 bulb

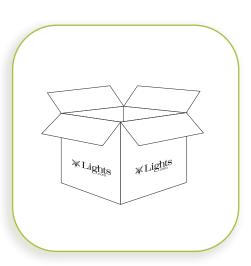

UNPACK YOUR FIXTURE


Carefully set aside all parts and pieces.

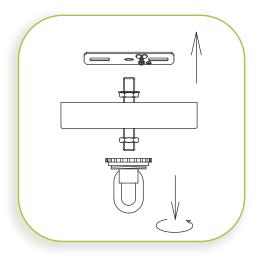

2

PREPARE MOUNTING BAR

Remove the mounting bar from the canopy by removing the screw collar loop.

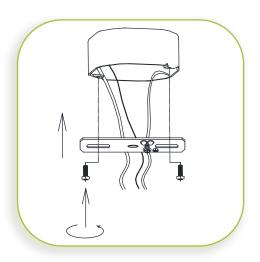

3

INSTALL THE MOUNTING BAR


If there is an existing fixture, remove it. Expose the supply wires from the J-Box. Secure the mounting bar using the two phillips head screws provided. Tighten to secure.



4

INSTALL SCREW COLLAR LOOP


Attach screw collar loop onto the threaded nipple that is attached to the mounting bar.

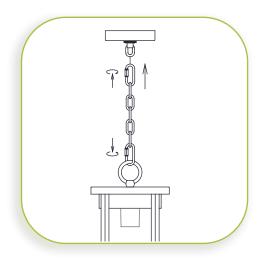

5

DETERMINE HEIGHT


Measure fixture to desired height. Attach the chain link that you have decided will be the upper link to the top adjustable chain link. Slide the screw collar ring and canopy, in that order, over the chain. Attach the top adjustable chain link to the screw collar loop, and the bottom adjustable chain link to the fixture loop. Then, close adjustable chain links. Push the fixture wires through the center of the screw collar ring, canopy, and screw collar loop, up through the threaded nipple. Cut power supply cord leaving at least 12" to 1 8" above the canopy for minor adjustments

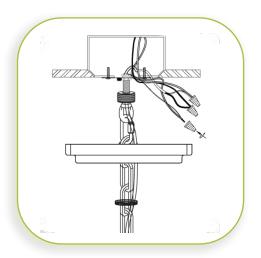

6

MAKE WIRE CONNECTIONS


Connect BLACK fixture wire to the BLACK supply wire and WHITE fixture wire to the WHITE supply wire. Connect the fixture GROUND wire to the J-Box GROUND wire. Secure all connections with the supplied wire nuts and electrical tape (not supplied). Tuck all wires carefully into the J-Box.

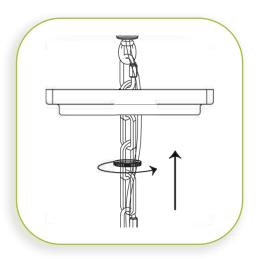

INSTALL CANOPY

Raise the canopy against the ceiling and install the screw collar ring to the screw collar loop. Tighten to secure.


Note: Canopy must be held flush with the ceiling and completely secure.

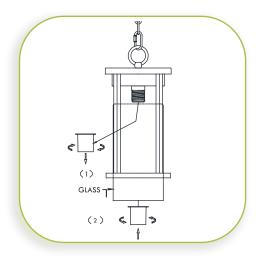

8

INSTALL GLASS

Unscrew the socket cover from the socket. Then, push the glass up over the socket and secure by threading the socket cover over the socket.

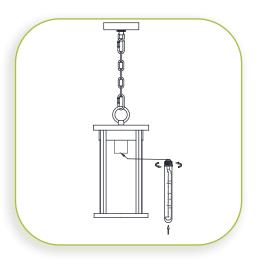


9

INSTALL BULB

Install your E26 100W Max bulb.

MAXIMUM WATTAGE 100W. DO NOT EXCEED THE WATTAGE AS STATED ON THE WARNING LABEL.

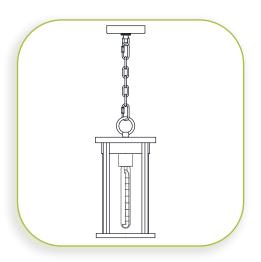

10

RESTORE THE ELECTRICITY AND CHECK
THE OPERATION OF YOUR NEW FIXTURE



DIMMER NOTE

For the best lighting experience, we recommend using a dimmer. Not only does this allow you to create a great ambiance, it allows for energy savings and extends the life of the bulbs.